HOW TO VELCRO TOGETHER TWO TURF TRAINING MATS

USING 4” WIDE MALE “SEAM TAPE”

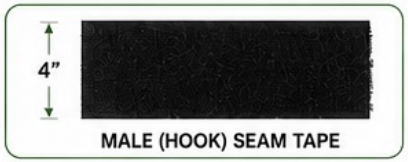

1 PLACE MATS SIDE BY SIDE

Position the two turf mats so the ends are aligned and the edges are straight.

2 CHECK ORIENTATION

Make sure the seam sides of both mats (with the Velcro loop) are facing each other.

3 CENTER THE SEAM TAPE

Place the 4” wide male (hook) seam tape on the ground, centered between the two mats.

4 LIFT & ALIGN

Lift one mat edge and align the Velcro loop underside with the seam tape.

5 PRESS DOWN FIRMLY

Lower the mat onto the seam tape and press down firmly along the entire length to engage the Velcro.

6 REPEAT ON OTHER SIDE

Repeat the process with the other mat edge: lift, align, lower, and press down firmly.

7 CHECK THE SEAM

Walk along the seam and press down to ensure the Velcro is fully engaged across the entire length.

8 COMPLETE

The two mats are now securely connected and ready for use.

TIPS & BEST PRACTICES

- Ensure the ground is clean and free of debris.
- Keep seam tape flat and centered for best results.
- Press firmly along the entire seam for a strong bond.
- To disconnect, gently lift the mat straight up.

PRODUCT REFERENCE
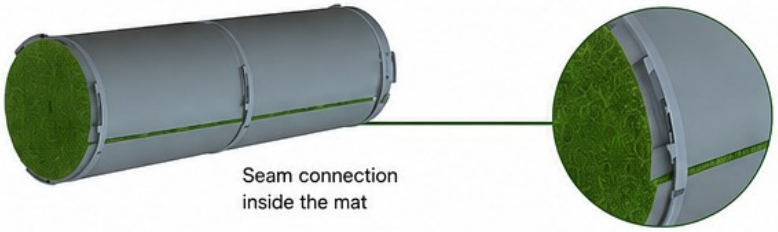
4” Wide Male (Hook) Seam Tape